

**IMPORTANT:** IN THE INTEREST OF PRODUCT PERFORMANCE AND SAFETY PLEASE READ THESE INSTALLATION AND WARRANTY INSTRUCTIONS BEFORE INSTALLING THE PRODUCT.



SAL products are designed in accordance with all mandatory International and Australian Standards, which require installation by a qualified installer and regular cleaning and maintenance of the equipment. Products are sold in accordance with the following instructions and SAL standard terms and conditions of sale, which are available via [www.sal.net.au](http://www.sal.net.au).

Due to continued product and information updates, product data sourced from [sal.net.au](http://sal.net.au) shall not form part of any contract and or technical performance guarantee unless expressly confirmed in writing by SAL at the time of order.

**UFO II SHB25HE LED HIGHBAY** electrical and installation specification effective 27/7/2020.

Model No.	Input (V)/(Hz)	Power (W)	Lumens (lm)	Line Current (A)	In-rush Current	CCT (K)	CRI	Mass (N.W. kg)	Colour	Dimension D x H (mm)	Max. LED Driver Number on MCB C type 16A
SHB25HE120 SHB25HES120	240/50	120	18000	0.53	60A Max.@700µs	5700	> 80	3.25	Black	Ø320 x 169	7
SHB25HE180 SHB25HES180	240/50	180	27000	0.79	60A Max.@700µs	5700	> 80	3.92	Black	Ø320 x 182	5

**FOR SENSORS IN SHB25HE120 & SHB25HE180:**

Standby Power	Microwave Frequency	Microwave Power	Detection Angle	Detection Range	Mounting Height	Operating Temperature
< 0.5W	5.8GHz ± 75MHz	< 0.3mW	30~150°	Max.Ø14m (ceiling mount)	Max.15m (ceiling mount)	-20 to 40

Electrical class	Class I	Beam Angle	120°
Power factor	≥ 0.95	Earth Leakage current	< 1mA
Operating ambient min/max (°C)	-20 to 40	Storage ambient limit (°C)	0 to 60
Operating humidity	10% to 85% RH, NC	Storage humidity	10% to 85% RH, NC
Calculated TM - 21, L <sub>70</sub> @ 85 °C (hrs)	50,000	Reported TM-21, 85 °C,L <sub>70</sub> (hrs)	> 36,000
Aiming restrictions (if any)	N/A	Product application	Interior commercial and industrial spaces
IK rating (if relevant)	08	Product installation orientation	Suspension mount
CCT (k) switch control (TC)	No	Dimmable	1-10V
Insulation cover rating (if any)	N/A	PIXIE connectivity	No
Replaceable LED	No (see clause 8)	IP rating	IP65
User replaceable LED	No (see clause 8)	Attachment type	Z

IP rating for interior products: The designated IP rating is "from below the ceiling" unless otherwise specified.

IP rating ALL products; Termination of the product must be made in accordance with the IP rating.

Earth Leakage current: Is calculated in accordance with AS/NZ 60598.1.2013 table 10.3.

**General product application requirements (where applicable) :**

- CCT or POWER selection (where supplied)** – IMPORTANT, where CCT or POWER selection switching is provided, it is important to switch OFF the SUPPLY before the CCT selection is made, otherwise equipment damage may occur.
- Recycling** – SAL encourages recycling, please consider the environment when disposing of packaging, batteries & components.
- Switching or test intervals** – For optimum product performance, good design practice does not encourage 24/7 operation of lighting products without the provision of a routine switching or regulatory test cycle. As a guide for continual operation installations, a twelve (12) hour duration for Industrial and Commercial applications and six (6) hour duration for Residential applications should be considered.
- Product maintenance** – In line with the relevant design standards and to protect your investment, it is important to have in place a routine cleaning program that reflects the installation environment and maintains the product in a clean and functional condition.  
  
IMPORTANT - The supply must be isolated before any product maintenance or cleaning is conducted. In addition, damage to ANY cable or cord supplied with the product must be addressed as follows; For attachment type X having a specially prepared cable, if the external flexible cable is damaged, it must be replaced by an equivalent cable exclusively available from the manufacturer or authorised installer. For attachment type Y, if the external flexible cable is damaged, it must be exclusively replaced by an equivalent cable by the manufacturer or authorised installer. For attachment type Z, if the external flexible cable is damaged, the cable cannot be replaced and the luminaire must be destroyed.
- Adverse, corrosive and coastal installation applications** – Unless the product is specifically designated for such applications in these installation instructions, which is supported by a professional maintenance program; installation of equipment in such environments is not recommended.
- Dimming products** – Dimming circuits and product compatibility must be validated by the installer before installation; SAL cannot be responsible for third party changes in dimmer compatibility.
- Suspended products** – For installation safety, any suspended products must NOT be installed in high air movement spaces or locations subject to impact.


8. **Light source replacements** – (non-replaceable light sources) - The light source of the product is deemed not replaceable, when the product reaches its end of life, the complete product must be replaced by a qualified installer. (Non-user replaceable light sources) - The light source of the product must only be replaced by the manufacturer or qualified installer. **Caution, risk of electric shock.**

9. **Interior downlights and sensors with remote drivers** – The mounting facilities provided for the transformer/driver (if any), need only be utilized if in the application of the product is required by AS3000. Drivers are not designed for installation environments that restrict conventional airflow.


10. **Floodlight products** – Unless nominated aiming restrictions or installation parameters apply, products are designed for installation environments between ground and 15 metres in height, subject to the desired optical performance being achieved.

11. **Specific installation procedures – Installation Orientation**

**Mounting hook**

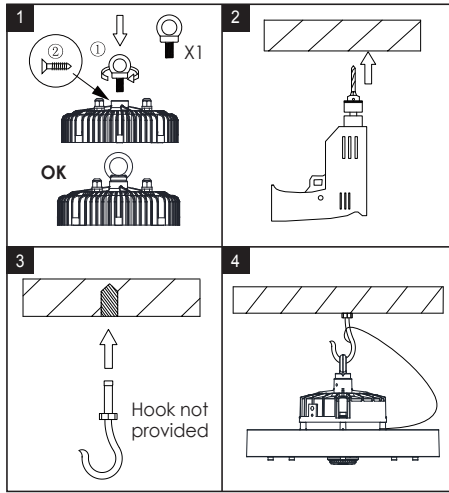


**For the SHB25HES series:**

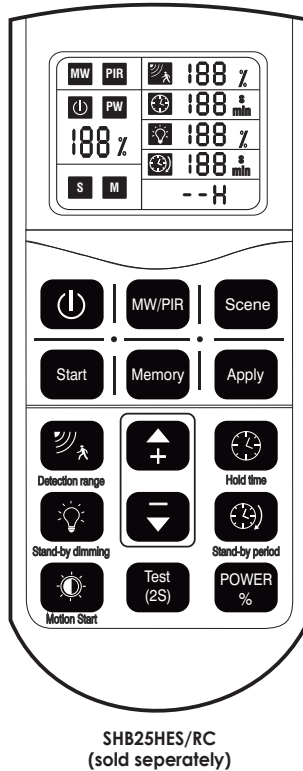

**SHB25HES/RC**  
(sold separately)

**Wiring Diagram with 1-10V control**

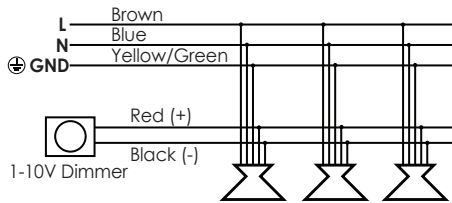

**Commissioning (change the parameter of the sensor on SHB25HES):**

1. ON/OFF, turn on or turn off the remote controller
2. Press the button of Scene to set up the different parameters
3. Press the button of Start, then select the parameters on sensor function
  - 3.1 **Detection range**
    - ☞ The area in which movement will trigger the sensor, 100% detection area also means strong sensitivity. (100%/75%/50%/25%)
    - Press the button, then change the parameter by using (+/-)
  - 3.2 **Hold time**
    - ☞ The period of light keeping 100% brightness after moving objects leave the detection area. (5s/30s/1min/3mins/5mins/10mins/20mins/30mins)
    - Press the button, then change the parameter by using (+/-)
  - 3.3 **Stand-by dimming level**
    - ☞ The definition of low output during the standby period. (10%/20%/30%/50%)
    - Press the button, then change the parameter by using (+/-)
  - 3.4 **Stand-by period**
    - ☞ The period of light keeping low output before it gets completely off. When it's preset as --, the light always keep at low output even no movement in the detection area. (0s/10s/30s/1min/5mins/10mins/30mins--)
    - Press the button, then change the parameter by using (+/-)
  - 3.5 **Daylight threshold (Daylight sensor)**
    - ☞ Definition of the ambient brightness, only when the ambient brightness is lower than the preset specific lux. (120lux/80lux/50lux/30lux/10lux/2lux/disable)
    - Press the button, then change the parameter by using (+/-)
4. Press the button of Memory to save all parameters
5. Press the button of Apply, the highbay SHB25HES will dimming down to 10% and then return to 100%, it means setting completely
  - ☞ Increase or decrease the parameters.

12. **Warranty** – In accordance with SAL's standard terms and conditions of sale, SAL warrant this product to be free from defects in materials and or workmanship for a period as stated below for goods not subject to incorrect installation, maintenance, operation, mishandling, environmental, unauthorised modifications or electrical operating conditions outside the nominated product specification as detailed in these installation instructions. The benefits to you given by this warranty are in addition to other rights and remedies you have under law. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

**Warranty term** – Thirty six (36) months for commercial use and sixty (60) months for residential use from date of purchase.

**How to make a claim?**

**Step # 1** – Within 30 days of the fault discovery, please contact the original place of the SAL product purchase during standard (local) business hours, with the following information (a) proof of purchase (b) description and quantity of the claimed fault (c) address of installation (d) operating hours of the product.

**Step # 2** – It is then the responsibility of the original place of product purchase to report the matter to SAL aftersales:

NSW   ACT   QLD	– SAL National Pty Ltd, 40 Biloela Street Villawood NSW 2163	P # 02 9723 3099
QLD	– SAL National Pty Ltd, 36 Whitelaw Place Richlands QLD 4077	P # 07 3879 5999
VICT   TAS   SA   NT	– SAL National Pty Ltd, 46-48 Keys Road Moorabbin Victoria 3189	P # 03 9532 3168
WA	– SAL National Pty Ltd, 29 Beringarra Av Malaga WA 6090	P # 08 9248 7458

**Step # 3** – Upon review of your claim and if the product is required to be returned to SAL for technical evaluation, then at the owners expense the product must be returned to SAL as per the above nominated locations.

**Step # 4** – Pending the evaluation, the claim will be validated resulting in the product being repaired or replaced with the same or best equivalent product at the discretion of SAL, or rejected if the product fault was found to be caused by conditions beyond the responsibility of SAL warranty obligations. Consideration of installation, product removal, return freight and or testing fees are not the responsibility of SAL.